


Assembly Instructions Floortray kitchen Kitchencabinet

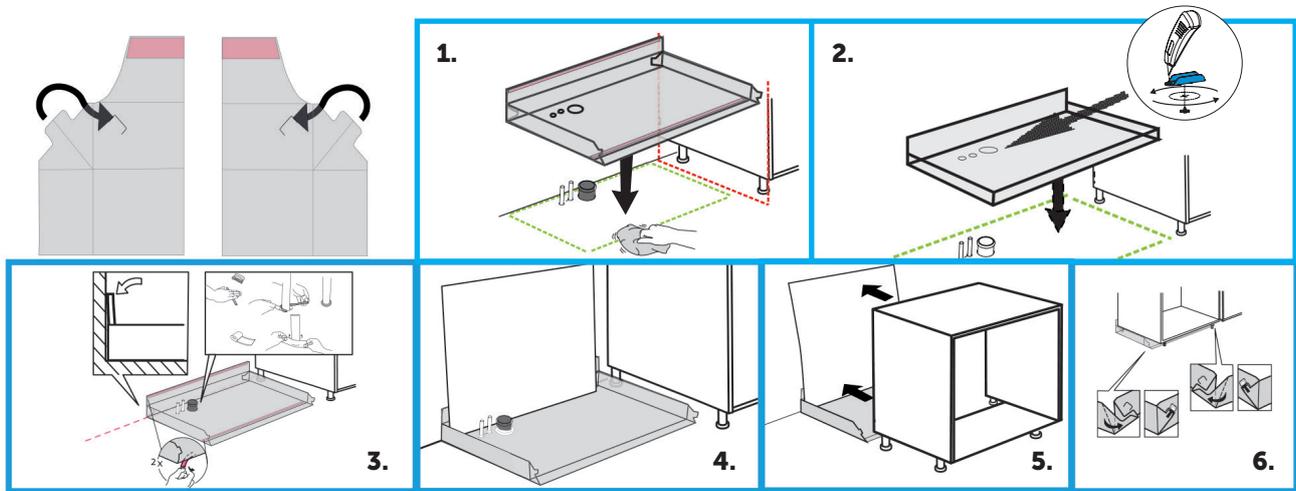

ASSEMBLY

1. Mark out the location of the floor protector in relation to the cabinet.
2. If there are pipes, measure and mark where the holes should be located. Make penetrations in the floor protector with Tollco Circular Cutter (included in Tollco Sealing Kit or Sealing Tape Kit). The position of the floor protector should be pressed against the kitchen wall.
3. Wipe the floor dry and clean. Remove the protective liner (2 pcs) that sits on the double-sided adhesive tape. Press the double-sided tape firmly against the floor. Slide in and seal around the pipe penetrations.
4. Place Tollco Wall Panel in the floor protector, remove the wall panel's protective liner that sits on the tape and attach the panel to the wall.
5. Lift the cabinet into place on the floor protector.
6. Fold up the front edge of the floor protector and fold in and lock the corner flaps in the groove on the edge.

SCAN CODE FOR MORE INFO
ABOUT THE PRODUCT.



Product	RSK	Item no.	Dimensions mm (WXH)
Floortray kitchen Kitchencabinet 40 cm	8080771	3005002-01-015	396x415
Floortray kitchen Kitchencabinet 60 cm	8080772	3005004-01-015	596x415
Floortray kitchen Kitchencabinet 80 cm	8080773	3005006-01-015	796x415
Floortray kitchen Kitchencabinet 85 cm	8080912	3005007-01-040	846x415
Floortray kitchen Kitchencabinet 90 cm	8080774	3005008-01-015	896x415



Tgnr 0505/01

TOLLCO AB

Rubanksgatan 4, 741 71 Knivsta, Sweden
Tel +46 18 34 9010. info@tollco.se tollco.se

TOLLCO
Your protection against water damage

20211015